KRAIBURG POLSTA

Prerequisites:



Concrete area:


- · Level and continuous ground
- No holes
- · No ridges

Mats:

Even temperature: min. 5°C to max. 30°C (store according to initial temperature)



You will need:




Marking:



Cutting:



Drilling and installing:



KRAIBURG fixings:




Framing plugs ø 10 x 135 mm with

- Hexagon screws (AF 13) A2
- Washers ø 30 mm A2

Nail plugs ø 10 x 80 mm - A2 with Washers ø 30 mm - A2

(Fixings are part of the delivery)

1 Install lower mat

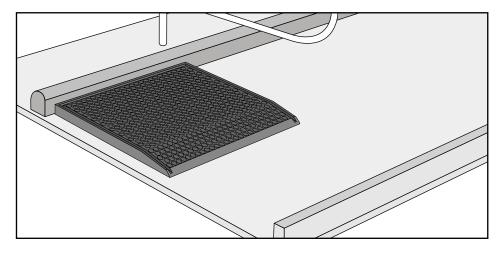

- Align in the center between the dividers
- (a gap might develop between the mats)
- Mat is flush with the brisket board




line

If there is no brisket board:

Measure approx. 180–190 cm from the rear boundary to the front and mark accordingly -> Place the lower mat on this

2 Place upper mat over it

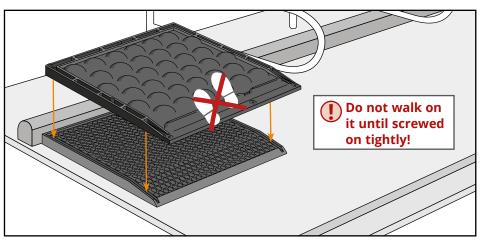

The stud links of the upper mat engage in the edge of the lower mat











Fix at each marking!



Tip: **Avoid slippage:**

- Fix at one fixing point
- Then drill further holes, etc.




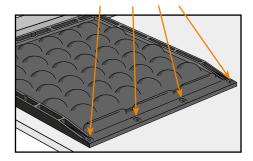



Drill

Knock the plastic plugs in flush






Framing plugs

x 135 mm!

Knock in nails and washers until they are seated evenly and firmly and are slightly countersunk

(B) Fix the side edges at the pre-fabricated markings:

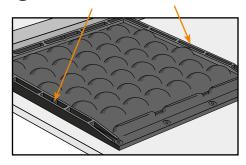








Knock the plastic plugs in flush




Tighten screws and washers



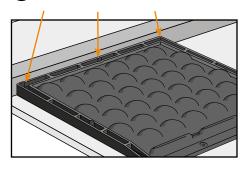



Drill



Knock the plastic plugs in flush



Tighten screws and washers

Tighten screws until they are seated evenly and firmly and are slightly countersunk. Do not overtighten!



Fill deep bedded stall as usual