

KRAIBURG WELA LongLine

Prerequisites:




Concrete area:

- No holes
- No ridges
- Min. 3% slope

Mats:


Even temperature:
min. 5°C to max. 30°C
(store according to initial temperature)




For animal well-being, a certain amount of bedding is necessary to absorb moisture (e.g. soft milled straw or mineral material)!

You will need:


Measuring:

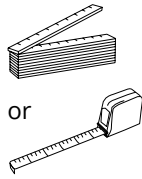


Marking:

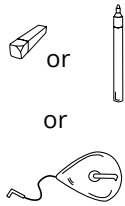

Cutting:

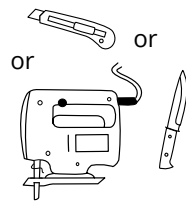

Drilling and installing:

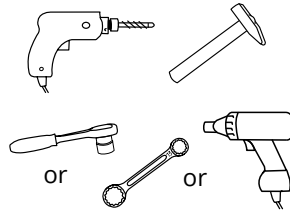

KRAIBURG fixings:

Framing plugs \varnothing 10 x 80 mm with
• Hexagon screws (AF 13) - A2
• Washers \varnothing 40 mm - A2


Framing plugs \varnothing 10 x 100 mm with
• Hexagon screws (AF 13) - A2
• Washers \varnothing 30 mm - A2

(Fixings are part of the delivery)



1 Placement line


188 cm for mat length 183 cm
175 cm for mat length 170 cm
170 cm for mat length 165 cm

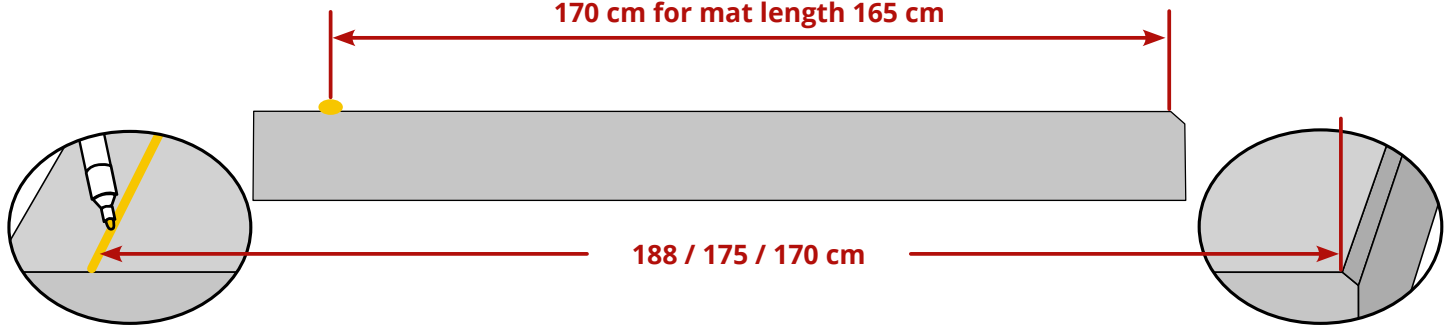


Draw a placement line at the front
Tip: Use a chalk line

Measure from the rear concrete edge

2 Roll out / position

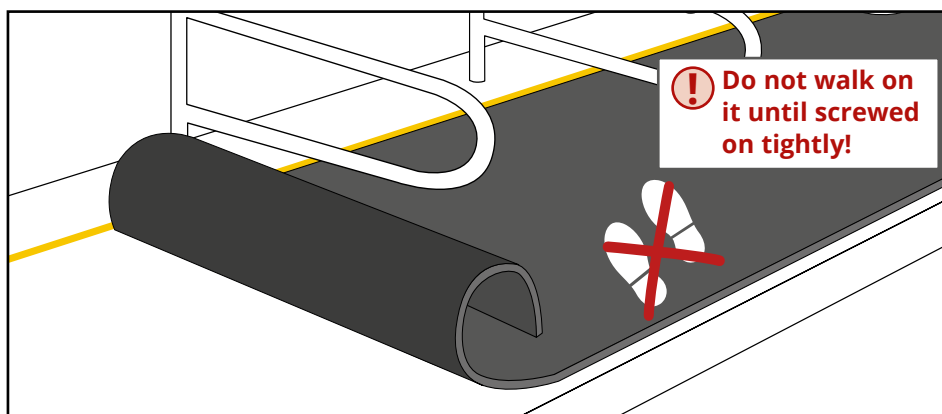

! Do not walk on it until screwed on tightly!

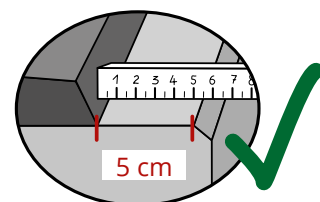

Rear concrete edge:
5 cm installation distance!


i The distance will decrease considerably within the first days after installation.

! Cutting out pockets for pillars or the like is not possible!





3 Fix

i Start from the center of the roll and fix on the right and on the left

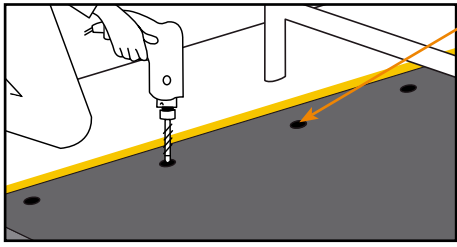


Fix at the front edge through the prefabricated fixing points


! Always make sure the front edge of the mat is located on the line. Re-adjust, if necessary.

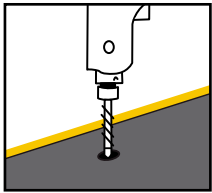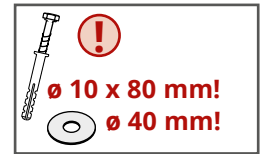

Drill

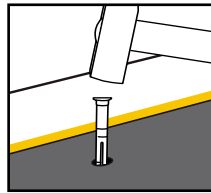

Knock the plastic plugs in flush

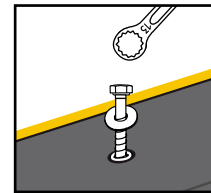


Tighten screws and washers


! Tighten screws until they are seated evenly and firmly and are slightly countersunk. **Do not overtighten!**

4 Fix side edge of the mat with a closure bar

A Position bars

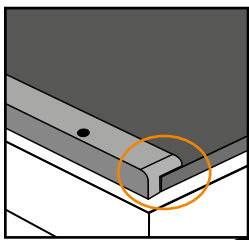


Left edge with bar **WELA-L**
or **WS-L 170**

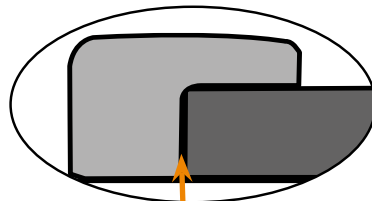

Contact


! DO NOT PRESS!

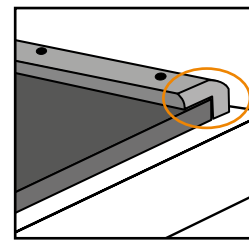


Right edge with bar **WELA-R**
or **WS-R 170**

- Rounded off end on the rear edge
- Flush with the rear edge of the mat


B Fix bars

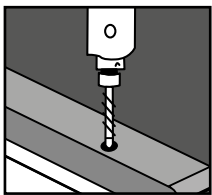


Drill

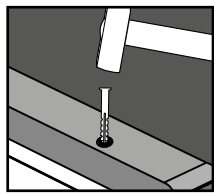

Knock the plastic plugs in flush

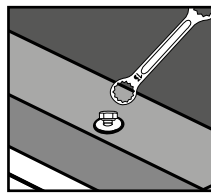

Tighten screws and washers until they are seated evenly and firmly.
Do not overtighten!

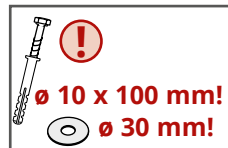


i Tip:
Avoid slippage:


- Fix at one fixing point
- Then drill further holes, etc.

5 Optional: Connect two rolls with a middle bar (underneath a divider)

A Middle bar **WELA-M** or **WS-M 170**

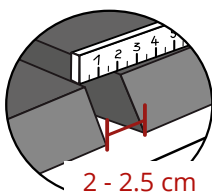

2 - 2.5 cm

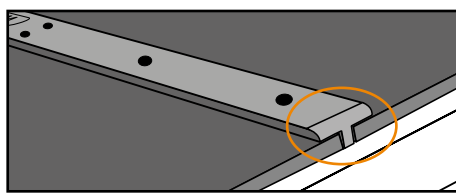

- Rounded off end on the rear edge
- Flush with the rear edge of the mat

! DO NOT PRESS!

B Fix bars: See **4 B**