

KRAIBURG KARERA P

Prerequisites:



Concrete area:


- Min. 10 cm thick and smooth
- No holes
- No ridges
- Max. 3% slope

Mastic asphalt:

- Max. 3 cm thick
- Ground: min. 10 cm thick, solid concrete layer

Mats:


Even temperature:
min. 5°C to max. 30°C
(store according to initial
temperature)

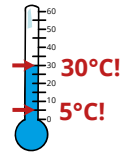


The mastic asphalt will more or less change shape during use.

You will need:


Measuring:

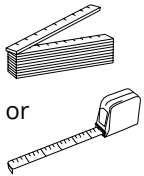


Marking:



Cutting:

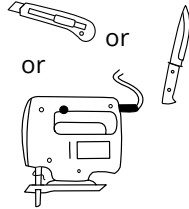

Drilling and installing:

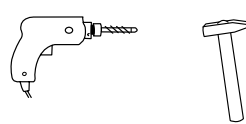

KRAIBURG fixings:



Concrete:




Nail plugs \varnothing 10 x 80 mm - A2 with
Washers \varnothing 30 mm - A2

Mastic asphalt:

Nail plugs \varnothing 10 x 120 mm - A2 with
Washers \varnothing 30 mm - A2

(Fixings are part of the delivery)

KARERA P can versatily be combined with the puzzle interlock system:

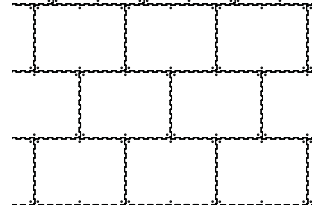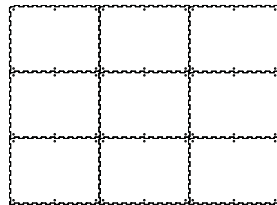


Scrapper:

Either use scrapper facilities specially adapted to rubber flooring **or** with structural alterations: Adapt existing scrapper facilities according to the **KRAIBURG guidelines for manure scrapers for rubber flooring on paved floors**




Mobile manure removal and compatibility with vehicle traffic:

Comply with the **KRAIBURG vehicle traffic specifications**




1 Install mats

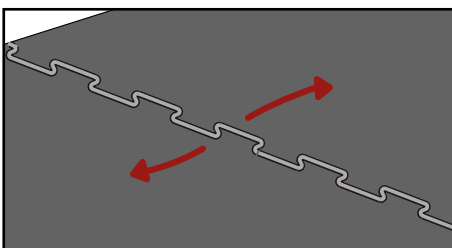


Loosely interconnect the mats, lift them slightly and pull them apart gently

Avoid creating tension!

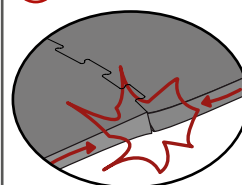

DO NOT
PRESS!



DO NOT PULL
ON ONE SIDE
ONLY!

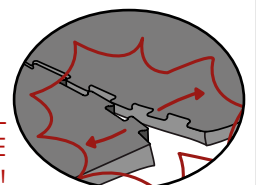

At low temperatures: Pull the puzzle interlock system apart to create a visible gap




About ① Install mats IN THE WALKING ALLEY WITH CENTRAL GUIDE

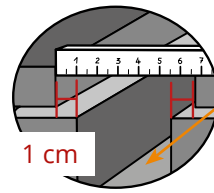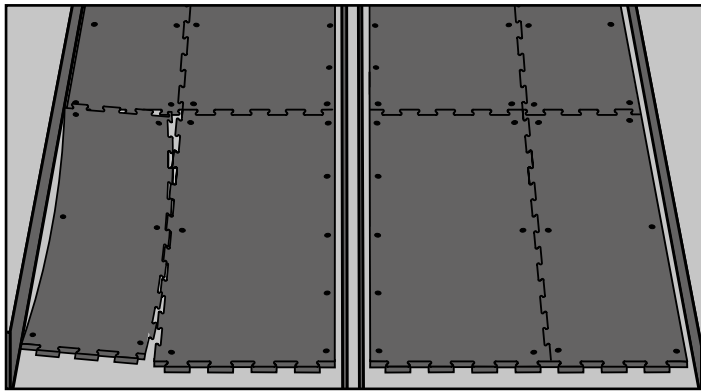


Distance to the guide channel: 1 cm

Distance to the side edge: Approx. 2 cm (min. 1 cm)

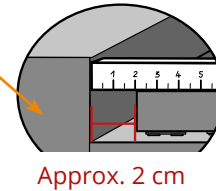

Approx. 2 cm

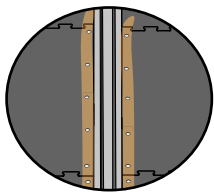

The mat side with 5 fixing points is always located along the central guide.



Tip: Install mats with cross joint!



About ① Install mats ON FURTHER AREAS



Tip: To facilitate tensionless installation, we recommend dividing up large areas evenly and leaving a joint of max. 2 cm at least every 12 m



Start at a straight edge!

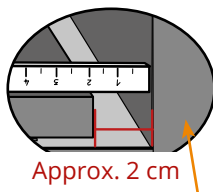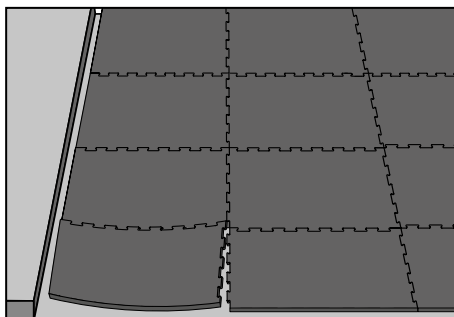

Approx. 2 cm


Distance to the side edge: Approx. 2 cm (min. 1 cm)

Install the complete area

About ① Install mats IN THE MILKING PARLOR


The mats are fixed on one side as standard (nail plugs) to make occasional cleaning underneath the mats easier.

It is also possible to fix the mats all the way round.

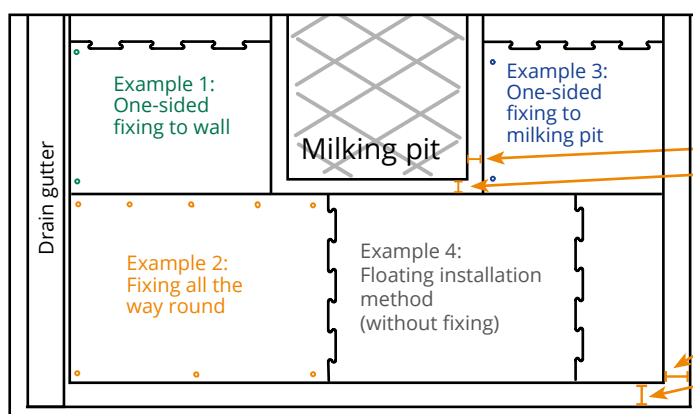


Distance to the milking pit: 1 cm

Milking pit

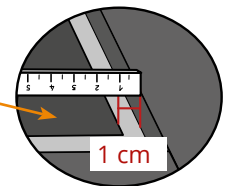

1 cm


Distance to the wall: Approx. 2 cm

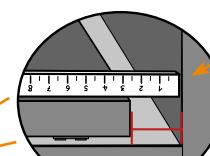


Side wall

Approx. 2 cm

2 Adapt

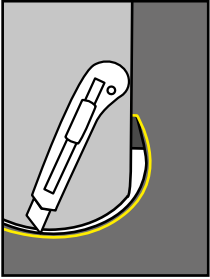

If necessary, cut mats to fit

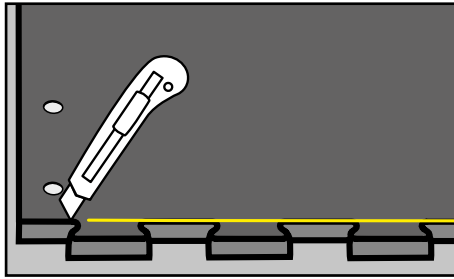


Any excess puzzle pieces can be cut off at the start and end of an area.



Tips for cutting:

- Moisten the blade slightly
- Pull mat parts apart slightly
- Use pliers to grab small pieces

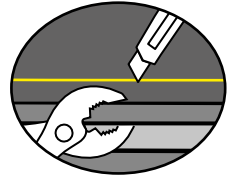

3 Fix




Concrete: Nail plugs \varnothing 10 x 80 mm
Mastic asphalt: Nail plugs \varnothing 10 x 120 mm




If some mats are cut to fit on site: Fix additionally at comparable distances along the cutting edge!



Fix through the pre-fabricated holes:

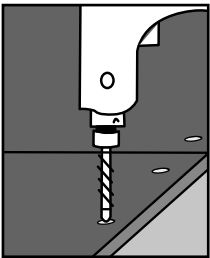


Drill

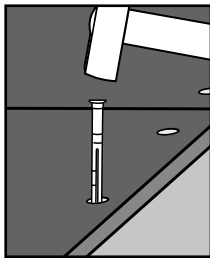

Knock the plastic plugs in flush

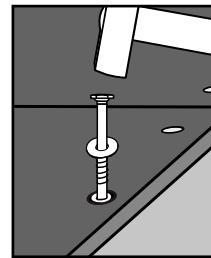
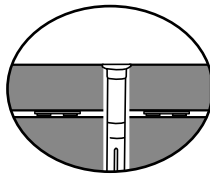


Knock in nails and washers until they are seated evenly and firmly and are slightly countersunk

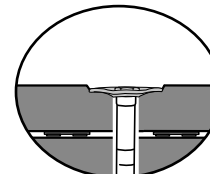

Tip:

Check if the fixing can be felt by sliding a flat metal object (e.g. a hammer) over it. If the fixing can still be felt, knock it in deeper!

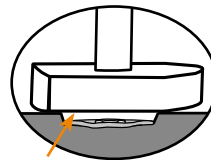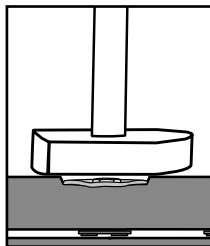

A small gap should be visible



Do not knock in too deep!

Tension should not develop, the mat should not bulge!

