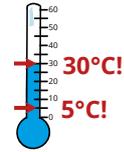# KRAIBURG maxiBOARD

Prerequisites:

Rubber flooring in the free stalls is already installed or positioned correctly

Concrete area:
• No holes
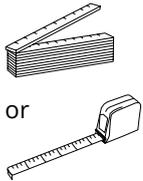• No ridges

maxiBOARDs:
Even temperature:
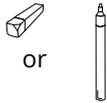min. 5°C to max. 30°C
(store according to initial temperature)

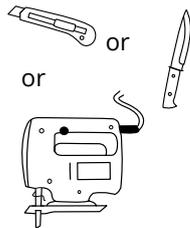**30°C!**
5°C!

You will need:

Measuring:

or

Marking:

or

Cutting:

or

or

Drilling and installing:

or

or
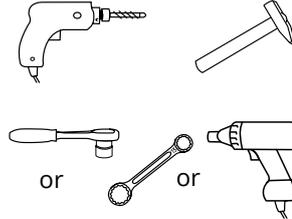
KRAIBURG fixings:

For 3 cm mats / without plastic bar:
Framing plugs ø 10 x 100 mm with
• Hexagon screws (AF 13) - A2
• Washers ø 30 mm - A2

For 6 cm mats / with plastic bar:
Framing plugs ø 10 x 135 mm with
• Hexagon screws (AF 13) - A2
• Washers ø 30 mm - A2

Additionally for 6 cm mats:
Plastic bar (height 3 cm)

When installing the lying mat system and maxiBOARD together, please note:
Initially follow the installation instructions for the lying mat system.
BUT: Fixing of the front edge of the mat coincides with fixing of the maxiBOARDs. Mat and maxiBOARD are fixed at the same time!
Exception: First, completely fix the **WELA / WELA Puzzle / WELA LongLine** lying mats and then install maxiBOARDs.
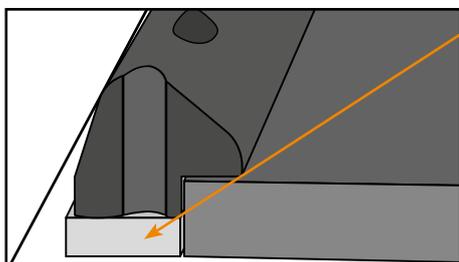
---

① Position maxiBOARDs

Interconnect the bars and position them loosely flush with the edge of the mat
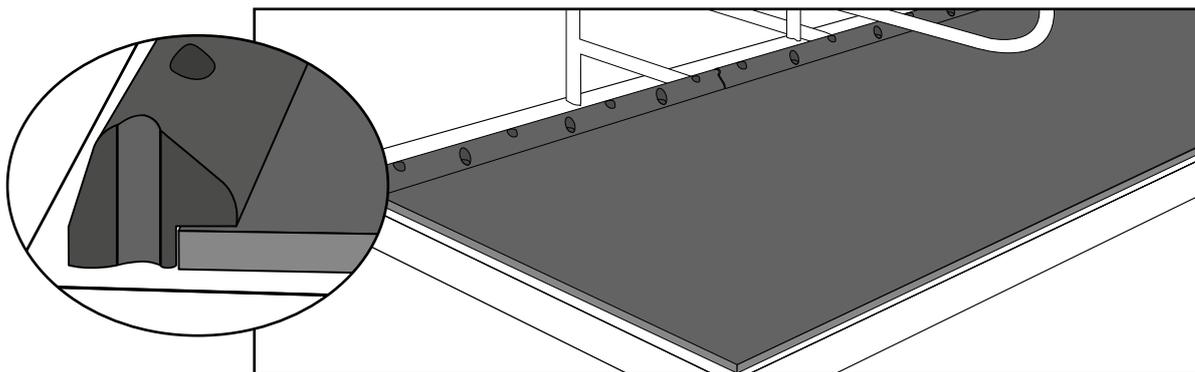
Do not press!

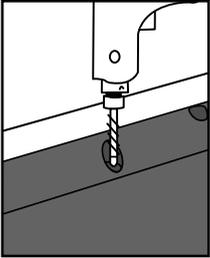### Use of plastic bars as the substructure (for 6 cm thick mats):
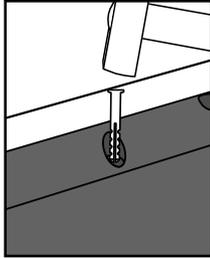

To raise the maxiBOARDs, shim the plastic bars

---

② **Fix**

> ⚠ **For 3 cm thick mats / without plastic bar: Framing plugs ø 10 x 100 mm**
> **For 6 cm thick mats / with plastic bar: Framing plugs ø 10 x 135 mm**
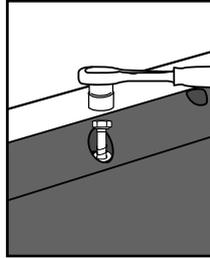
Fix at the pre-fabricated fixing points:

Drill

Knock the plastic plugs in flush

Tighten screws and washers until they are seated evenly and firmly. **Do not overtighten!**

> ⚠ Use every fixing hole!

> ⚠ **Note:**
> Seal the drilled hole with the plug immediately after drilling (to prevent drilling dust entering the hole); only then drill the next hole.

KRAIBURG **kraiburg-elastik.com**

KRAIBURG maxiBOARD - 12/2023
Legal basis is the German version of the document.